

# Biotica800

OWNER'S MANUAL



# IMPORTANT SAFETY INSTRUCTIONS

## **WARNING:**

When using electric products, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- To reduce the risk of injury, close supervision is necessary when a product is used near children.
- Do not put fingers or hands into the product.  
Do not repair or modify the unit.
- Do not alter the plug in any way.  
Do not use if the power cord or plug is damaged or the connection to the wall outlet is loose.
- Only use the cord provide by Betterair
- Do not damage, break, forcefully bend, pull, twist, bundle, coat, pinch, or place heavy objects on the power cord.

- Remove the power plug from the outlet before cleaning the unit. When removing the power plug, grasp by holding the plug itself, never hold by the cord.
- Do not handle the power plug with wet hands.
- Clean the unit with dry fabric, do not use detergent to clean the unit.
- Do not use the unit on its side.
- Avoid swallowing and eye contact. If swallowed in excess drink 1-2 glasses of water. May cause gas or upset stomach. If eye contact occurs rinse with water. Keep out of reach of children and pets.

## SAVE THESE INSTRUCTIONS

# Cartridge Installation

1

Slide and remove the white plastic cover of the **Biotica**800 Ecological Balancing System.



2

Shake the Enviro-Biotics™ cartridge well and remove the orange foil. Do not tilt the cartridge after opening.



4

3

Gently slide the new Enviro-Biotics™ cartridge in the same direction of the arrow as far as it will go.



4

Replace the white cover by sliding it back into place until it locks.



5



## Programming

### ON/OFF BUTTON

The **BIOTICA800** will turn on automatically once it is plugged in. Press the power button in order to turn off the unit.

## Where to locate your **BIOTICA800**

Your **BIOTICA800** should be located out of the reach of young children or pets. Do not place the **BIOTICA800** near an open door or a window that leads outdoors in order to obtain maximum coverage indoors.

The most common place recommended for placing your **BIOTICA800** is in the bedroom, as that is where people generally spend most of their time at home plus that's where dust mite allergens are most common.

However, if you are combatting odor issues or pet allergens we recommend placing the **BIOTICA800** in proximity to where the odor emanates from or where the pets are located.

Remember the **BIOTICA800** treats an area up to 800 Sq.Ft. and placement of the unit is critical to combating your particular issue and achieving its benefits. For example: If you are combatting a stale and moldy smell from your basement it will provide no relief if it is placed in the kitchen.

## Wall mounted installation

Drill two screw holes into the wall in order to fasten the Wall Mounting Bracket to the wall. It is recommended to position the **BIOTICA800** in proximity to an air flow to aid in the dispersion of the Enviro-Biotics.

Make sure that there is an electric outlet in proximity so the electric cord can reach the unit.

## WARNING

The **Biotica800** should be used only with the power pack provided by the manufacturer.

## Flat surface installation

Alternatively to using the **Wall Mount**, you may place the **BIOTICA800** on any flat surface (nightstand, countertop etc.) and stabilize it with the provided pedestals.

For best results, place the **BIOTICA800** nearby a bed, close to a carpeted area, table tops, bookcases, shelves etc. It is recommended to position the **BIOTICA800** in proximity to an air flow to aid in the dispersion of the Enviro-Biotics.

## Power Connection

Connect the **BIOTICA800** power converter plug into an outlet after inserting the DC end into the "charge" receptacle located on the side of the **BIOTICA800** below the operating buttons and place the unit in the desired location. The unit will activate immediately and disburse a "dose" of Enviro-Biotics™


## CAUTION

Do not place directly under lights or other heat sources over 100 degrees. Damage to the **Biotica800** may occur.



## Operating Buttons (optional)

1


Press the "snowflake" button  in order to immediately release an extra "dose" of Enviro-Biotics™.

2

Press the "Pause" button  to put the device on standby mode for 10 hours. When activated the orange **10 HR**  light will be illuminated.

The **BIOTICA800** makes a small amount of sound while operating and the unit is dispersing Enviro-Biotics™. Activating the pause mode places the unit into the standby mode (no pump operation) for the same ten hour period each night. The pause will have no effect on the coverage achieved as the frequency of disbursement is increased.

## Status Indicator Lights



The **BIOTICA800** has a multifunction "Status" indicator light **On**  which reflects:

- Solidly lit Green light means unit is on and in the standby mode
- Blinking Green light means the unit is disbursing Enviro-Biotics
- Solidly lit RED light means the Enviro-Biotic cartridge is low and has approximately two weeks of probiotics remaining.
- Blinking RED light means the Enviro-Biotic cartridge is empty and requires replacement with a new cartridge.

## Replacement EnviroBiotics Cartridges

The EnviroBiotics cartridge requires replacement approximately every three months (depending on the frequency of manual dispersion). Replacement EnviroBiotics cartridges can be purchased at [www.EnviroBiotics.com](http://www.EnviroBiotics.com). We also offer an auto-ship program for the cartridges.

## Equipment and Accessories

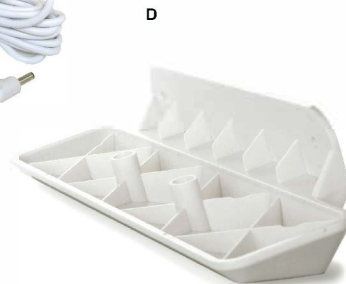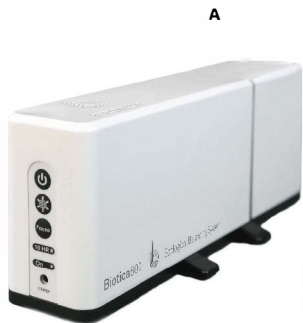

- A** Biotica800
- B** Cartridge
- C** Power Converter
- D** Wall Mount

## Specifications

### Dimensions

3.9in (h) x 9.8in (L) x 2.1in (w)

---

### Weight

1.4 lb

---

### Power Supply

Input Voltage: 110/230 VAC

---

Output Voltage: 4.2 VDC

---

Approvals: UL, cUL ,CE, RoHS and FCC

---

Working Temp: 35-109 F°

---

Working Humidity: 85% or less

---

Liquid Capacity: 3.8 oz cartridges

---

Performance: Up to 800 sqf

---

## Biotica800 Safety Precautions

An environment rich in beneficial bacteria supports your well being.

The **Biotica800** nourishes your indoor environment with a repetitive flow of EnviroBiotics that cleans Air, Surfaces and Objects, especially in those hard to reach areas.

- Turn off and unplug the unit before moving it.
- Warranty is only valid with the use of EnviroBiotics
- Do not immerse in or place the **Biotica800** near water, sinks or bathtubs.

### WARNING

KEEP OUT OF REACH OF CHILDREN

Store in a cool dry place

## FAQ's

**Q** When I first place the cartridge into my BIOTICA and plug it in bubbles come out of the top of the unit.

**A** This is normal because the cartridge is shaken prior to initial installation. Just wipe the bubbles away. They will subside shortly.

---

**Q** How long will my Enviro-Biotics™ cartridge last and how do I obtain replacement EnviroBiotics Cartridges?

**A** Your EnviroBiotics cartridge is designed to last approximately three months and then will require replacement. Replacement cartridges are available at [www.EnvirioBiotics.com](http://www.EnvirioBiotics.com). We also offer an auto ship program to insure that you never run out.

**Q** How long is the BIOTICA warranty?

**A** The **BIOTICA800** is warrantied free from defects in manufacture for a period of one year from the purchase date. Please register your BIOTICA at [www.EnvirioBiotics.com](http://www.EnvirioBiotics.com).

---

**Q** What does the red light on the power converter mean?

**A** When illuminated it shows that the voltage conversion from AC to DC is operating and the receptacle is active.



Contact Us

833-692 3883

[www.EnviroBiotics.com](http://www.EnviroBiotics.com)

---

© 2026 Ecological Balancing  
technologies Corp.. All rights reserved

An environment rich in beneficial bacteria supports your well being.

The **Biotica800** nourishes your indoor environment with a repetitive flow of EnviroBiotics that clean Air, Surfaces and Objects, especially in those hard to reach areas.